



LED BATHROOM MIRROR WITH MP3/BLEETOOTH USER MANUAL

Note
The information in this manual is subject to change without notice.
Thank You For Choosing This Led Bathroom Mirror With


Mp3/bluetooth

Dear Customer,
May we take this opportunity to thank you for purchasing this LED bathroom mirror with mp3/bluetooth. We strongly recommend that you carefully study the Operating Instructions before attempting to operate the unit and that you note the listed precautions.

I. SAFETY INSTRUCTIONS


- * Read instructions: All safety/operating instructions should be read before the product is operated.
- * Keep these instructions: These instructions should be retained for future reference.
- * Follow all instructions: All operating instructions should be followed.
- * Do not open the mirror, contact your dealer if the mirror is not operating properly.
- * Do not drop the unit or make any scratch on the panel when you move the product. Any scratch on the panel or drop of the product may cause functional failure.
- * Do not press the display panel hard or use sharp objects to clean.
- * Install the mirror in stable place. An unstable mirror may cause personal injury, Damage, or malfunction may result.
- * When moving the LED bathroom mirror, turn it off and disconnect all cables and the plug. Product damage, electrical shock, or fire hazard may result.
- * Non-use periods: Unplug this product during lightning storms or non-using periods. When the unit is not used, turn the power off.
- * Clean only with a light damp cloth. Unplug the power cord from the AC outlet before cleaning the product. Do not use any solvent-containing detergents for cleaning.
- * Power cord protection: To avoid any malfunctions of the unit and to protect yourself against electric shock, fire or personal injury.
- If the unit has been dropped or otherwise damaged, turn off the power and disconnect the AC power cord.
- * Servicing: Do not attempt to service the product yourself. Removing covers may expose you to high voltage and other dangerous conditions. Refer to qualified service personnel for servicing.
- * Replacement parts: In case the product needs replacement parts, please make sure that the service person uses replacement parts specified by the manufacturer. Any use of unauthorized parts may result in fire, electric shock and/or other danger.

I . OUTLOOK

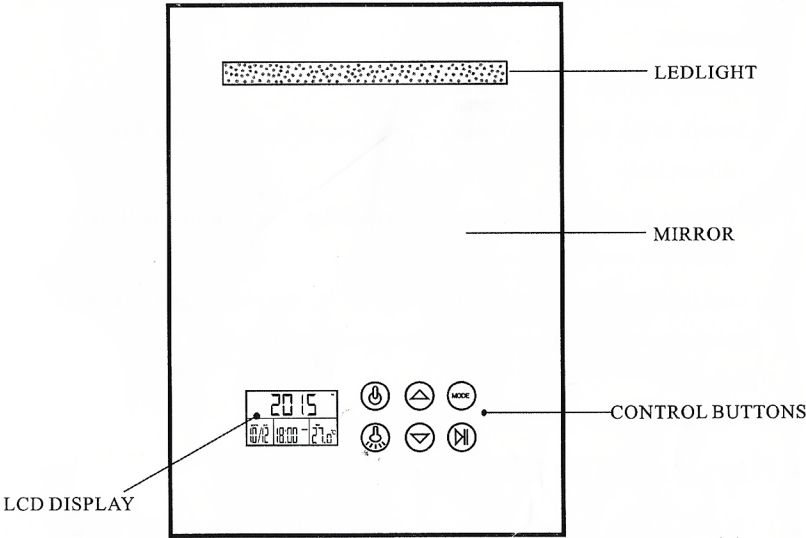


Control Buttons

- ⏻ Power
- ⏮ Next Song/VOL+
- ⏭ Last Song/VOL-
- ⏸ Play/Pause, press this button for 3 second continuously into Time setting mode
- ⏴ Mode switch button. Under Radio FM mode, press this button for 3 second continuously into channel searching.
- 💡 ON/OFF LED Light

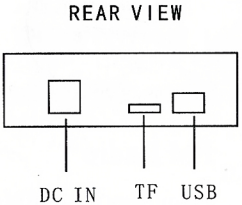

II 、GENERAL OPERATION

Turn On

Connect to power, press the button “

Connect to the Bluetooth

1. Switch to the Bluetooth “MODE”, the icon of the Bluetooth flash means still not link.
2. Open the Bluetooth of the phone or equipment, searching the Bluetooth equipment nearby.
3. Find the Bluetooth equipment”OWATIS” on the phone, and link. After match successful, the icon of the Bluetooth on the mirror turn blue, and stop flash.
4. Play music of the phone or equipment.


Play music of the USB/ TF card

- 1.On the USB mode, the machine will play USB priority, then TF card
- 2.Connect the U Key to USB port, the machine will play music automatically. (support format: MP3, WAV)
3. Play U key audio files in the order.


Note: TF optional.

FM Radio

Frequency of the FM radio 87-108HZ, adjust the antenna to the right position.

- 1.Switch to the FM MODE, the icon of the FM turn blue and stop flash.
- 2.Press the button of MODE for 3 second continuously into channels searching, and the channels storage automatically.
3. Press button “

Time Setting

- 1、Press “MODE” to switch to Time mode
- 2、Press the button “

TROUBLE SHOOTING

| PROBLEMS | PROBLEM REASONS |
|-------------------------|---|
| Can not turn on | Make Sure the power is on and the product is connected properly |
| Bluetooth not link | Check the machine has already link to others Bluetooth equipment nearby. Or unplug, then connect and turn on the machine again to try |
| No Sound | Check the machine volume is too low, or mute |
| Music play not smoothly | Check the distance of the Bluetooth equipment, or have barriers between the machine and Bluetooth equipment. |
| Not Reading U Key | Check the U key have audio file or not, and the format is correct. |

WARRANTY CARD

Commodity _____
Product Model _____
Inspector _____
Customer Name _____
Contact Tel _____
Purchasing date _____
Series No. _____
Invoice No. _____
Seller Name & Tel _____
Distributor Name & Tel _____

The product has been proved all functions are working correctly before leaving the original factory. Please make sure you have followed all the safety instructions mentioned in the manual when you take this LED bathroom mirror with mp3/bluetooth for repairing.

REPAIR INFORMATION

| DATE | CONDITION | REPAIRMAN | REMARK |
|------|-----------|-----------|--------|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

